

INSTALL GUIDE

Adjustable Rack Gap Panel

Part Numbers

10164-SM	Small Adjustable Rack Gap Panel, 60" (42U-45U)
10164-LG	Large Adjustable Rack Gap Panel, 60" (48U-50U)
10245-SM	Small Adjustable Rack Gap Panel, 24" (42U-45U)
10245-LG	Large Adjustable Rack Gap Panel, 24" (48U-50U)

The shipping carton contains the complete AisleLok® Adjustable Rack Gap Panel. No additional assembly or tools are required.


Safety Requirements

The AisleLok Adjustable Rack Gap Panel attaches between two metal surfaces using strong rare earth magnets. Use caution when handling the powerful magnets. Make sure to keep fingers clear of the contact area between the case magnets and the metal mounting surface.

For proper mounting, the Adjustable Rack Gap Panel magnets must make direct contact with a steel or other ferrous metal surface, e.g. rack side panel, structural column, etc. Any obstruction that prevents the magnets from making direct metal contact will reduce the holding force of the magnets and may prevent the Adjustable Rack Gap Panel from adhering to the surface.



10164

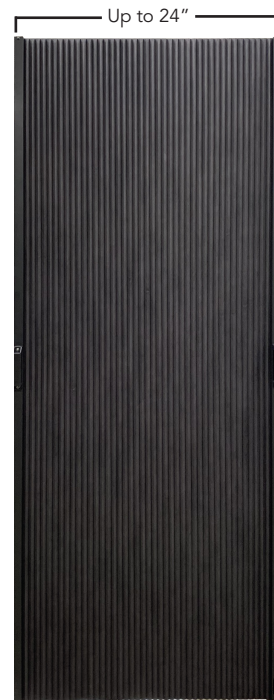

10245

For Sales and Installation, contact:



(800) 328-2256 • www.dataclean.com

INSTALL GUIDE

Installation Procedures

1. Determine the best attachment position for the AisleLok Adjustable Rack Gap Panel assembly. The Adjustable Rack Gap Panel is designed to be installed right out of the box without the need for tools and can be mounted in a few different ways, for example:
 - a. Case mounted to the right, material drawn to the left.
 - b. Case mounted to the left material drawn to the right.
2. Attach the AisleLok Adjustable Rack Gap Panel Assembly to the side of the cabinet (or other steel surface):
 - a. Stand the Adjustable Rack Gap Panel Assembly up vertically with the graphics facing you.
 - b. Position the bottom of the Adjustable Rack Gap Panel Assembly, with the magnets facing the cabinet side panel, against the base of the cabinet side panel (or other steel surface) in the location desired.
 - c. With the bottom of the case touching the cabinet side panel (or other steel surface), slowly pivot the top of the case into position. Keep fingers clear of the contact area as the Adjustable Rack Gap Panel will 'snap' in place, as the magnets take hold. Make sure the case is plumb and as close to the front of the gap as possible.
3. Extend the retractable material to close off the gap:
 - a. With the case magnetically fixed to the side of the metal surface, grab the handle and gently lift up and pull the spring loaded material from the case.
 - b. Continue pulling the material across the gap opening until the magnets in the handle side contact the adjacent cabinet (or other steel surface).
 - c. Adjust the handle side so it is plumb and positioned properly.



Notes:

1. To remove the AisleLok Adjustable Rack Gap Panel assembly simply reverse Steps 1–3:
 - a. To release the handle side of the material from the magnetic attachment, pull sufficiently to overcome the magnet hold.
 - b. To release the magnetic hold of the case against the side panel, grab the very top of the case and with a twisting and pulling motion, overcome the magnet hold to free the case from the cabinet.
2. Mounting on non-magnetic surfaces with mounting kit:
 - a. An optional Striker Plate Kit (10164-SPK) is available from Upsite Technologies for mounting the Adjustable Rack Gap Panel on non-magnetic surfaces. Please contact sales or visit our website for details.
3. Once installed:
 - a. Warps or sags in the material may occur due to the two attachment surfaces not being parallel. If attached to cabinets, adjusting the plumb of the cabinet(s) may eliminate the warping/sagging.

For Sales and Installation, contact:



(800) 328-2256 • www.dataclean.com

84022B ©2020

LIMITED WARRANTY

Upsite Technologies, Inc. (the *Company*) warrants to the original purchaser that products delivered hereunder will be free of defects in materials and workmanship for a period of twelve (12) months from the date of purchase (the "Warranty Period").

The *Company* shall, at its option, within the Warranty Period, either repair or replace free of charge, any product or part thereof found, upon the *Company's* inspection, to be defective in materials and workmanship, and will return the repaired or replaced product to the purchaser at *Company's* expense.

For warranty service and shipping instructions, contact the *Company* at the telephone number shown below. If the product is under warranty and the defect appears to be covered by this Limited Warranty, the *Company* will issue to the purchaser a Notice of Authorization For Warranty Return. Products returned to the *Company* for warranty service must be accompanied by a statement of defect, the Notice of Authorization for Warranty Return provided by the *Company*, and proof of purchase.

This Limited Warranty is conditioned on the following:

1. The *Company* must be notified within 12 months of purchase and have been given the opportunity of inspection by return of any alleged defective product free and clear of all liens and encumbrances to the *Company* or its manufacturer; and
2. The product must not have been abused, misused, or improperly maintained, and/or non-Upsite authorized repair performed during such period; and
3. Such defect has not been caused by corrosion or exposure to other than ordinary wear and tear; and
4. The installation and use of the product has been in accordance with the manufacturer's instructions and not been modified or customized to include but not limited to cut, resized, burned, glued, bent, re-shaped, disassembled, attachments added to, improperly installed or used in a manner other than intended.

The company makes no other express or implied warranty or representation of any kind whatsoever including any warranty of merchantability or fitness for a particular purpose and all such other warranties are hereby included.

The *Company's* maximum liability hereunder is limited to the purchase price of the product. In no event shall the *Company* be liable for any consequential, indirect, incidental, or special damages of any nature arising from the sale or use of the product, whether based in contract, tort, strict liability, or otherwise.

Note: Some jurisdictions do not allow limitations on incidental or consequential damages or how long an implied warranty lasts, so that the above limitations may not fully apply. This warranty gives specific legal rights and you may also have other rights which may vary from jurisdiction to jurisdiction.

For complete warranty and repair information Call (888) 982-7800 or visit upsite.com

U.S. and International Patents Pending

For Sales and Installation, contact:



(800) 328-2256 • www.dataclean.com